




# Assembly Instruction For 21565TWPN

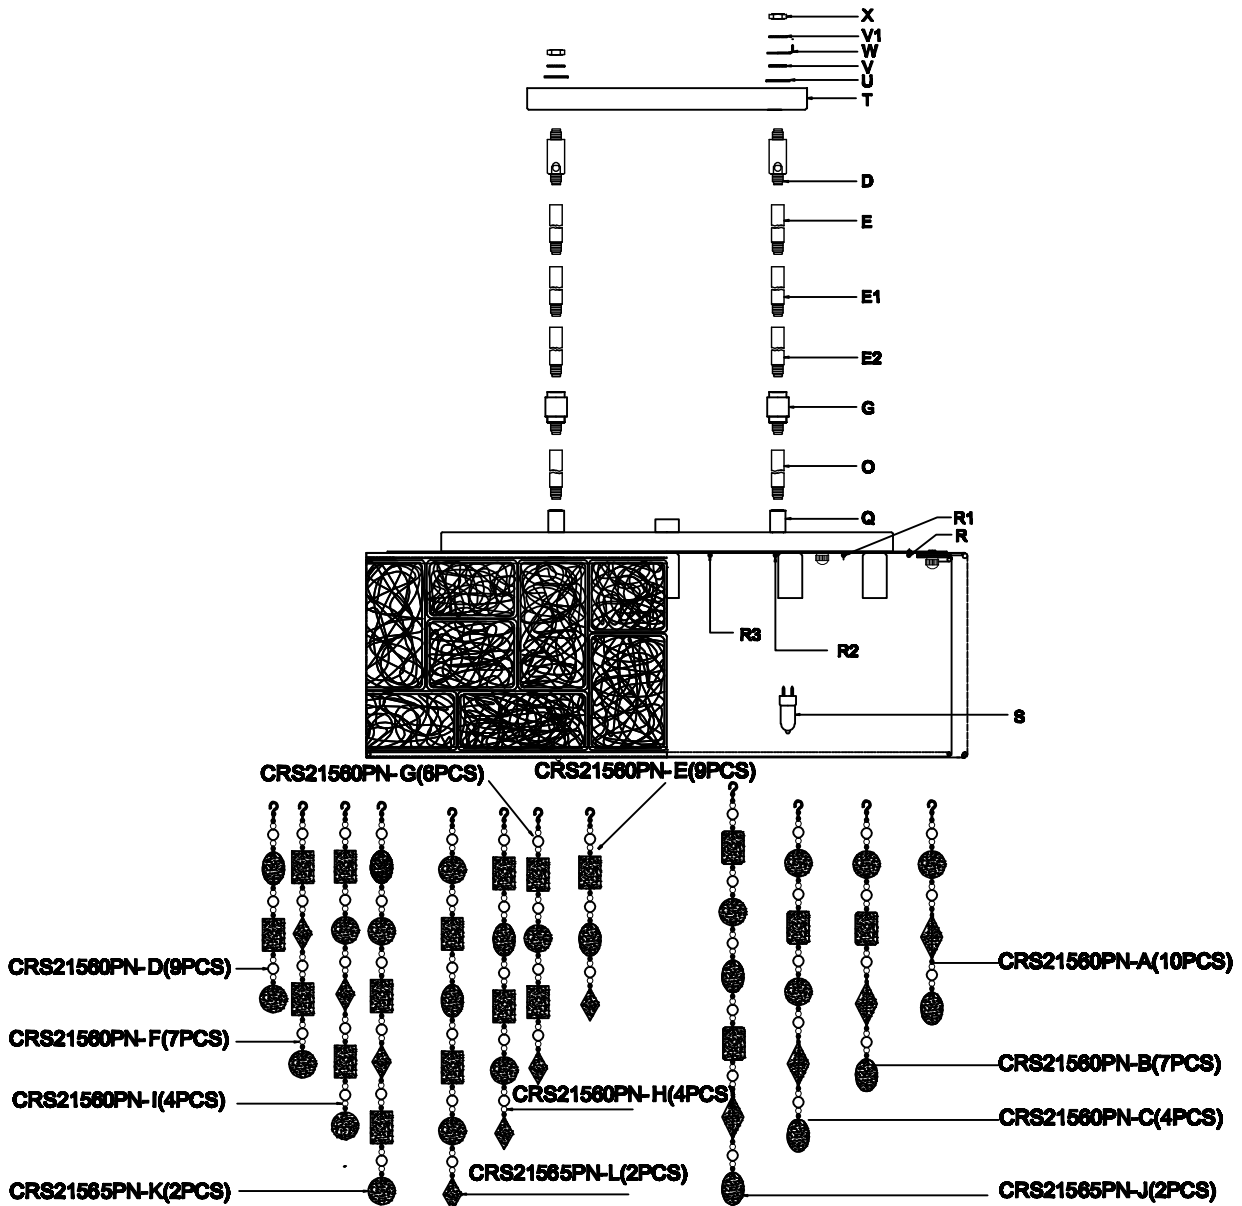

1. Tighten the tube(O) to the coupler(Q);
2. Tighten the coupler(G) to the tube(O);
3. Tighten the tube(E2) to the coupler(G);
4. Tighten the tube(E1) to the tube(E2);
5. Tighten the tube(E) to the tube(E1);
6. Tighten the coupler(D) to the tube(E);
7. Put the ceiling pan(T), metal washer(U), washer(V), (V1), ground wire(W) to the coupler(D), then secured by hex nut(X)
8. Insert the bulb(S) into socket
9. Hang the crystal string(CRS21565PN-J), (CRS21565PN-L), (CRS21565PN-K) to the metal ring(R3) by mix
10. Hang the crystal string(CRS21560PN-C), (CRS21560PN-H), (CRS21560PN-I) to the metal ring(R2) by mix
11. Hang the crystal string(CRS21560PN-B), (CRS21560PN-G), (CRS21560PN-F) to the metal ring(R1) by mix
12. Hang the crystal string(CRS21560PN-A), (CRS21560PN-D), (CRS21560PN-E) to the metal ring(R) by mix