


ASSEMBLY INSTRUCTIONS

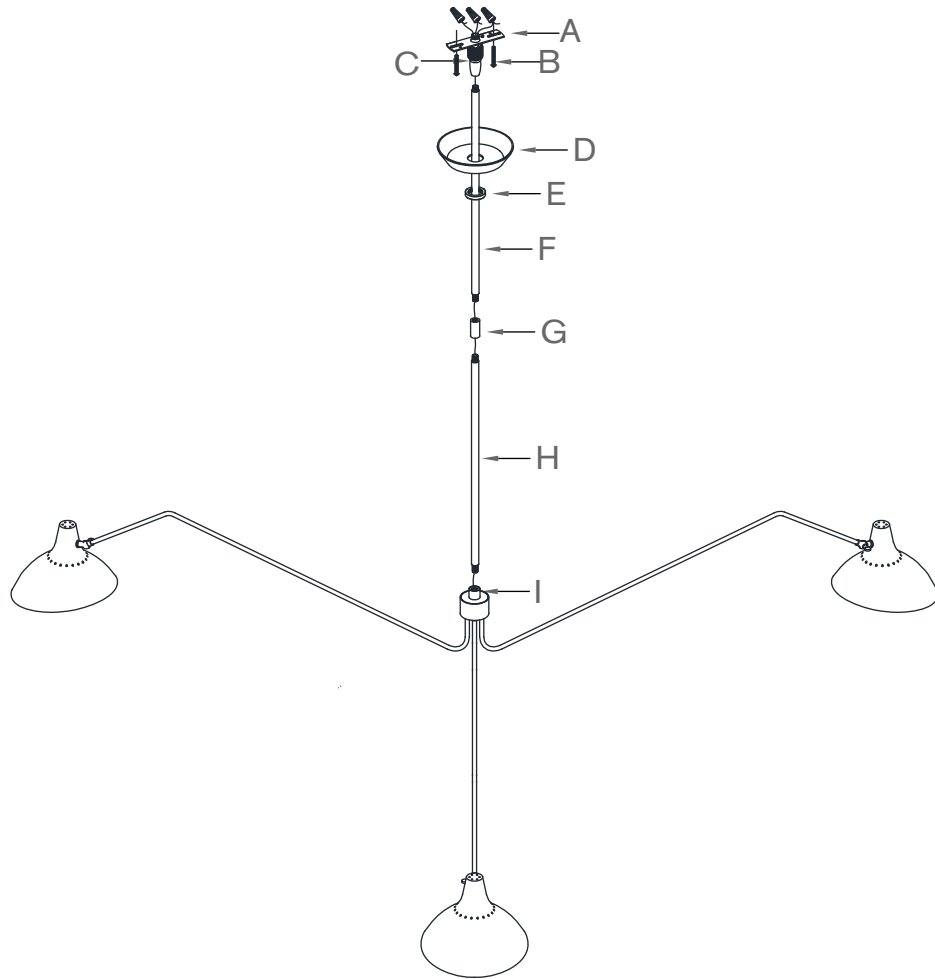

Charlton XL Chandelier

Item # ARN 5007

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. According to the desired hanging length, feed wire through one or two connection rod (H) & (F) and connector (G).
3. Thread the nipple of pole (H) into the joint (I) by turning in a clockwise direction until tight.
4. Screw connector (G) onto the top nipple of connection rod (H) by turning in a clockwise direction until tight.
5. Thread the nipple of pole (F) into the connector (G) by turning in a clockwise direction until tight.
6. Unscrew canopy ring (E), slide canopy ring (E) and canopy (D) on connector (F).
7. Screw the top nipple of connection rod (F) into mounting loop (C).
8. Attach mounting strap (A) to ceiling outlet box and secure with mounting screws (B).
9. Attach the bare copper ground wire from the fixture to the ground junction box wire (usually green or copper), fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape. Be sure no wire strands are exposed. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
10. Connect neutral wire from fixture (ridges molded wire) to the neutral wire from the junction box (usually white). Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape. Be sure no wire strands are exposed.
11. Connect the hot wire from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten both together with a plastic wire connector and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
12. Tuck the wire connections neatly into the ceiling outlet box.
13. Slip canopy (D) to ceiling and secure with canopy ring (E).
14. Insert light bulbs (not included) into sockets.
15. Restore power and test fixture. Installation is complete.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.



VISUAL COMFORT & Co. Est. 1987